

### Supported Operating Systems (as of 8-22-2011)

Operating System	WITE32 version 2.65 – 2.72	WITE32 version 3.00 – 3.03	WITE32 version 3.10	WITE32 version 3.11 – 3.30	WITE32 version 3.40	WITE32 version 4.00 – 4.20	WITE32 version 4.30 beta	WITE32 version 4.40 beta
Windows 95	YES	NO	NO	NO	NO	NO	NO	NO
Windows 98	YES	YES	NO	NO	NO	NO	NO	NO
Windows 2000 w/o Service Packs	YES	YES	YES	YES	YES	YES	NO	NO
Windows 2000 Service Pack 1	YES	YES	YES	YES	YES	YES	NO	NO
Windows 2000 Service Pack 2	YES	YES	YES	YES	YES	YES	NO	NO
Windows 2000 Service Pack 3	NO	NO	YES	YES	YES	YES	NO	NO
Windows 2000 Service Pack 4	NO	NO	YES	YES	YES	YES	NO	NO
Windows XP Service Pack 1 (with Patch 822603)	NO	NO	NO	YES	YES	YES	YES	YES
Windows XP Service Pack 2 (with Hotfix KB908673)	NO	NO	NO	NO	YES* (see note)	YES* (see note)	YES* (see note)	YES* (see note)
Windows XP Service Pack 3						YES	YES	YES
Windows 7 (32-bit)	NO	NO	NO	NO	NO	NO	YES	YES
Windows 7 (64-bit)	NO	NO	NO	NO	NO	NO	NO	YES

\* Important note: If your test system includes Guzik V2002 spinstand with Windows XP, you must install Microsoft Hotfix KB908673 for Windows XP Service Pack 2. This hotfix includes an updated USB driver version, please refer to the following web-page for more details: <http://support.microsoft.com/?kbid=908673>.

At this time Microsoft does not include this fix into automatic update, therefore you need to install this fix manually. To obtain the fix please contact [support@guzik.com](mailto:support@guzik.com) or download it from Guzik FTP site ( "/Common/WinXP Service Pack 2 Hotfix" folder ).

If you upgrade your Windows XP to Service Pack 2 and do not install the Microsoft Hotfix KB908673, you may experience intermittent communication delays between Host PC and V2002 spinstand, which may affect test time.

In order for WITE32 to run under Windows 2000 or Windows XP operating system the following conditions must be met:

- PCI Guzik host adapter is required with Windows 2000/XP. Older ISA Guzik host adapter cannot be used with Windows 2000/XP.
- ISA Guzik host adapter can be used only with WITE32 ver.2.00–2.70 running under Windows 95/98.
- Installation of WITE and Guzik PCI boards (PCI Host adapter and Beetle) under Windows 2000/XP requires Administrator or Power User privileges.
- Starting from WITE32 ver.3.10 operation of WITE itself with Guzik V2002 spinstand requires Administrator or Power User privileges.

The following operating systems are not supported by any WITE32 revision:

- Windows ME
- Windows CE
- Windows XP w/o Service Packs
- Windows Vista